



Doc Ock Cliffy Protector Installation

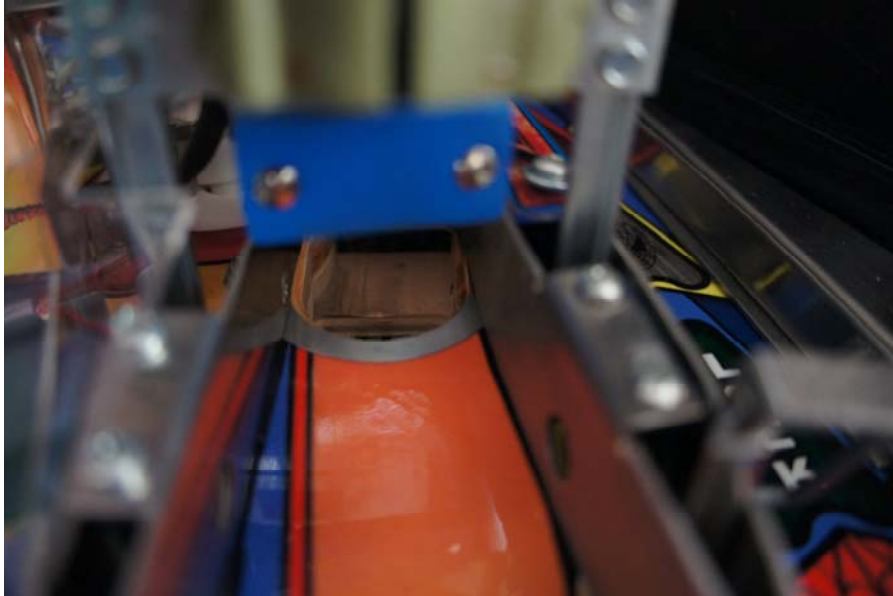

To install the Doc Ock Cliffy protector, you will need to remove the vertical up kicker assembly and the guide walls that contain the Opto sensors.


1. Remove the connector screw from the loop

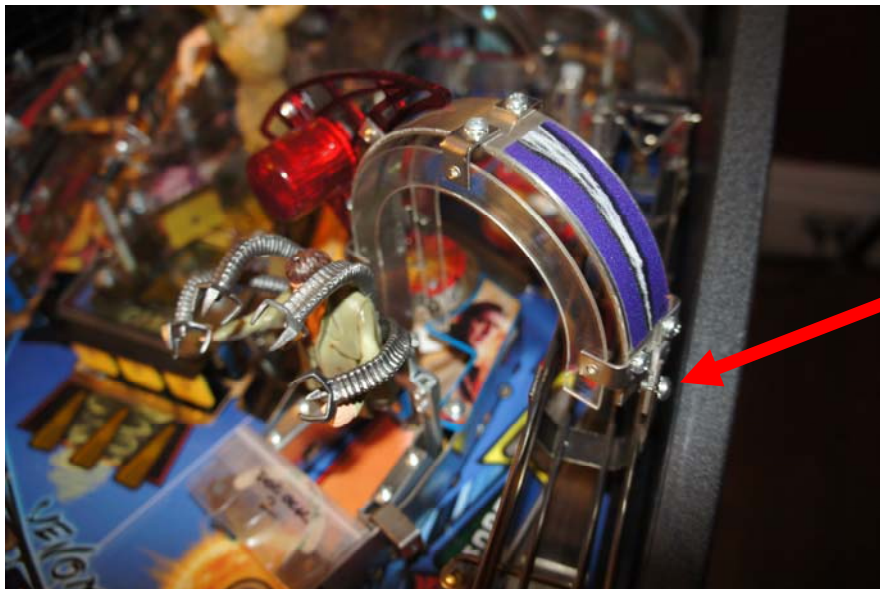

2. Remove the plastics behind the Doc Ock Hole. First remove the clear plastics (not shown), followed by the screened plastic piece.



3. Then, lift the playfield to disconnect the Optos (Not shown: they are labeled) and remove the nuts holding the guide lane walls.

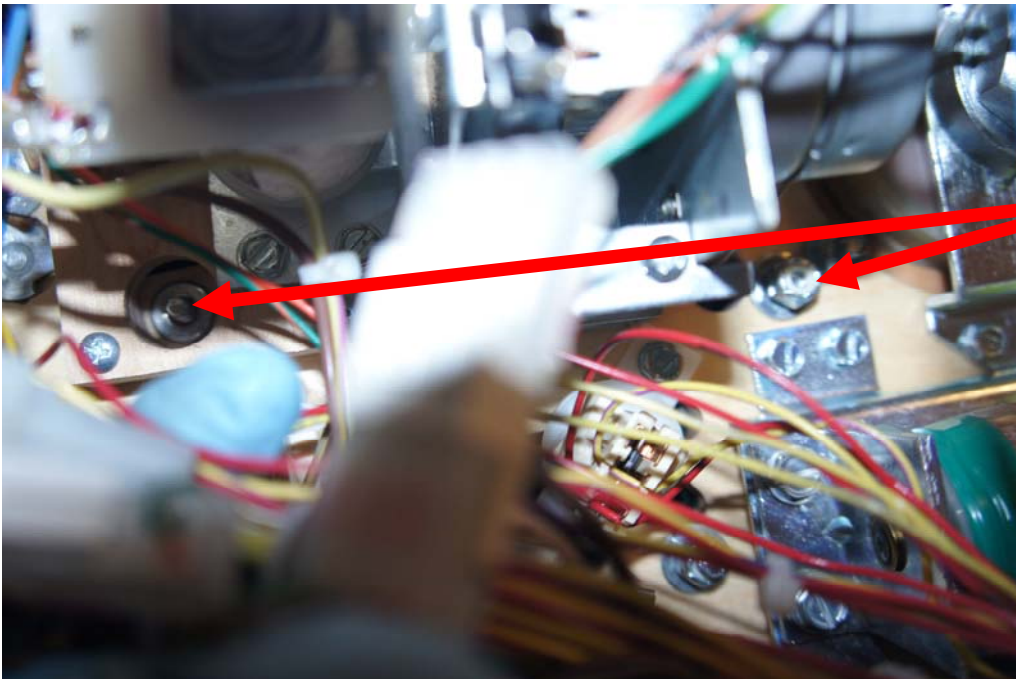

4. Next, lower the playfield to remove the plastic web and flasher from the VUK loop (set aside on the bumpers), then remove the remaining screws holding the guide lanes and the loop assembly. If you carefully lift the guide lanes out and rotate them under Doc Ock, they will come out without having to remove Doc Ock. Now you are ready to install our Cliffy and start to reassemble.



5. I forgot to take a picture before I replaced the inner guide lanes, but here is a picture as I was reassembling.



6. All finished!

